



 
 
Manual for Keypad Safe

Read all instructions before using this safe

WARNING

- For security purposes, change the factory default code as soon as possible. Default code: 159
- Safe can be opened by either Pin code and/or Emergency Keys.
- Test and Store emergency keys in a secure place, NOT inside of the safe.
- Avoid leaving safe door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and the contents.
- To maximize the security and performance of the safe, test pin code every 6 months.
- Test and make sure the safe works properly before mounted. Once tested, mount the safe before use.
- Keep children away from safe; they should not play with or around the safe at any time. Children at play could accidentally pull on the safe or accidentally pull on the safe door causing safe to tip over if not properly mounted.


PARTS OF THE SAFE

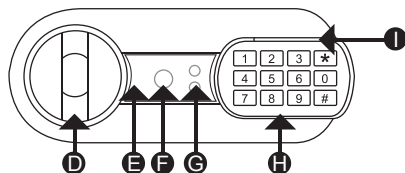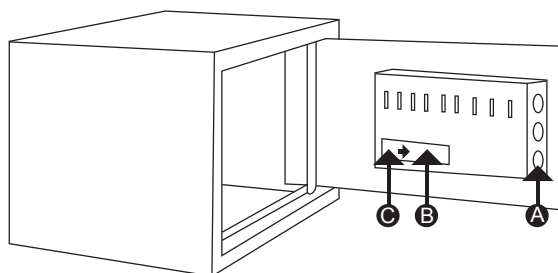

- A. Bolts
- B. Battery Cover and Battery Compartment
- C. Initialization Button
- D. Knob (Master Key)
- E. Emergency Lock Cover
- F. Emergency Key Access (remove lock cover to expose)
- G. External Power Supply: 9V battery (remove lock cover to expose)
- H. Key Pad
- I. Indicate Light


OPENING SAFE WITH ACCESS KEY

 1. Remove the cover: Push the left side of cover to expose the key access.

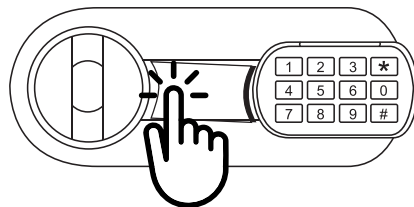

2. Insert emergency key into key access and turn key counter-clockwise. Hold the key to open position and turn the knob clockwise to open the door.

 NOTE: Once operation is finished, please pull out the Emergency Key and Keep it in a safe place; NOT INSIDE of the safe.

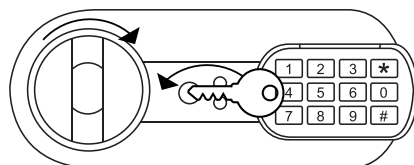

INSTALL BATTERIES

 
1. With the door open, remove the battery cover by sliding the cover.
2. Insert 4 AA batteries by lining them up in a manner as indicated by the "+" and "-" signs.
3. Put the arrow of the battery cover align to the arrow on the compartment, slide the batteries cover back into place. Restore the battery compartment cover.

NOTE:
DO NOT use any other type of non-alkaline battery.
DO NOT mix new and old batteries.

External Battery Source

9V battery can be used as an external power source. (9V battery not included) Please remove emergency key access cover, then place 9V battery, touching the metal contacts. Safe should power up, if not switch the polarity of 9V battery.


NOTE:
Only for emergency use

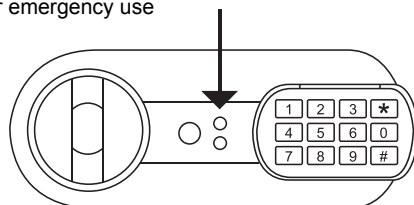

LOCK/UNLOCK SAFE

Unlock Safe with Pin Code

 1. On the keypad enter registered pin code 3-8 digits and press " #" to confirm, the indicate light turns green with 2 beeps.
2. Turn the knob clockwise and pull the door outwards within 5 seconds to unlock the safe.

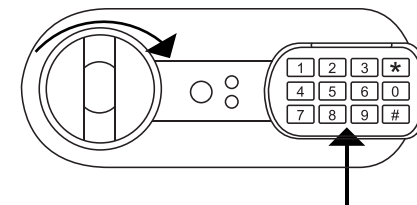

Lock Safe

Turn the knob counter- clockwise to close the door.

SETTING USER CODE

Default code:159

1. With the safe open, press and release initialization button located inside of battery compartment, the blue light will be on.
2. On the keypad input new desired Pin Code 3-8 digits and press " #" to confirm.
3. 2 beeps and the blue light flashes Twice. New Pin Code registration is completed.

SETTING MASTER CODE

1. With the safe open, Press "00" on keypad.
2. Press and release initialization button, the blue light will be seen.
3. On the keypad input new desired Pin Code 3-8 digits and press " #" to confirm.
4. 2 beeps and the blue light flashes Twice. New Master code registration is completed.

RESET TO FACTORY DEFAULT MODE

Open the safe door and press initialization button for over 5 seconds, a long beep will be heard.

The safe is back to factory default condition.

NOTE: Factory Default Code is "159"

See reverse side for more information

LOCK OUT MODE

1. THREE WRONG Pin code entered consecutively, the keypad will be locked and the warning beep and blue light flash will be lasting for 20 seconds.
2. Another THREE WRONG pin code entered consecutively, the keypad will be locked and the warning beep and blue light flash will be lasting for 5 minutes.
3. During the Lockout period, the keypad will be disabled. Only Emergency key can access the safe.

NOTE:

1. The keypad would be disabled during the warning beeps and blue light flashes. You can stop the beeps and lock out period by using emergency key, then power-cut by removing the battery.
2. When keypad is in Sound Off mode during lock out period, warning beep is disable, only Blue light flashing.

SOUND OFF/ON

Press "00★", sound is disable.
Press "66★", sound is active.

LOW BATTERY WARNING

After entering correct pin code and red light is flashing this indicates the batteries are low. Please follow steps under "INSTALL BATTERIES" to change new batteries.

Note: Safe may still be opened in low battery state depending on battery voltage. If safe cannot be opened please use emergency key. All registered pin codes remain stored.

MOUNTING METHOD

The safe may be mounted to a wall or floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

Wall Mounting

 
 
 
Do not mount the safe without anchoring to the wall.

- Find the studs in the wall, at your desired location. Most studs are 16 inches or 24 inches apart.
- Check the wall for concealed wires or pipes.
- Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).

- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely

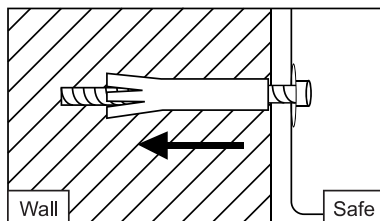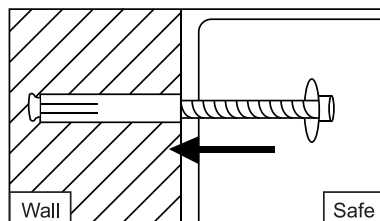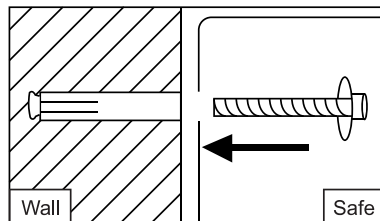

CARE AND MAINTENANCE

- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.
- DO NOT use chemicals or cleaning agents to clean the safe

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances

www.barska.com



1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 1.888.666.6769 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767