



Locking and Unlocking the Cash Box with Cylinder Lock (select models)


Open the cash box cover, insert key and turn to lock or unlock cash box, lift cover of cash box to open.

Caution: Cover of cash box will only open about 90 degree, do not force open the cover that may damage the cash box.

Combination Code Lock (select models)


How To Set Your Opening Code

1. Turn the dials to the preset combination 0-0-0
2. Move the reset button to position A as shown in picture 1.
 - a. The reset button is inside the cash box on the back of the lock mechanism.
3. Turn the dials to set your desired combination and write down your combination
4. Move the reset button back to position B as shown in picture 2. The lock will now open to your new combination.
5. To change your combination: Turn dials to your SET combination and repeat steps 2-4 above.

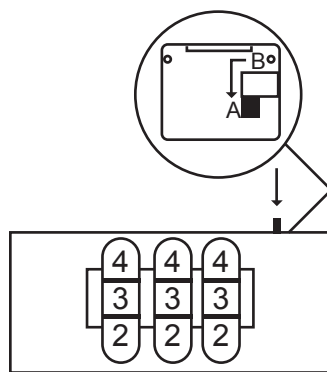

Picture 1

RESET button

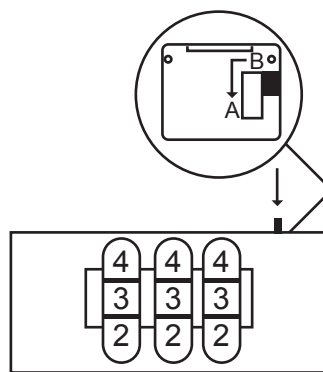

Picture 2

RESET button

Breakable Emergency Key Box (select models)

Using the chained stick break the glass window to retrieve the key during an emergency situation

NOTE: For added safety cover the glass with a piece of cloth before breaking window

Care and Maintenance

DO NOT use chemicals or cleaning agents to clean the lock box, if necessary use a dry duster or micro fiber cloth to remove any dust or smudges, Keep liquid and moisture away from the lock box

DO NOT force open the lock box it may be damaged

DO NOT over stuff the contents of the lock box or you can damage the handle or the contents

For lock boxes that require a key, DO NOT places keys inside of lock box

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.



1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767