

***SnapSafe®***

Titan Owner's Manual

Thank you for purchasing a SnapSafe®Titan. Now you have the peace-of-mind knowing your valuables are protected from loss due to fire or theft. Best of all, you can easily locate or relocate this protection anywhere piece-by-piece to any room in minutes. The **SnapSafe® Modular Assembly System** offers all the impregnability of a welded safe in an easy-to-assemble modular design.

## CUSTOMER SERVICE

---

For all Customer Service questions call toll free:

**1-877-214-4470**

**Or write:** SnapSafe Inc. Customer Service


3721 Doubleton Drive, Stuart, FL 34997

**Or Email:** [info@snapsafe.com](mailto:info@snapsafe.com)

# SNAPSAFE TITAN

## FEATURES:

- Delivered right to your door
- Assembles in minutes
- Sledgehammer and pry-bar resistant 3/16" solid steel door
- Thick steel exterior walls
- 2300°F one-hour Fire Shield protection
- Heat activated door fire seals
- Secures 12+ long guns
- Nine slot full gun rack
- Option Between UL Security Listed locks: Digital or Mechanical
- Eight chrome steel live locking bolts
- Spring-loaded relocker
- Powder coated finish
- Lined interior
- Adjustable lined shelves
- Includes 1 full shelf and full gun rack and a half gun rack with 2 half shelves
- Professional grade "non breach seal" dead bolt door
- Predrilled for floor mounting
- Lifetime warranty

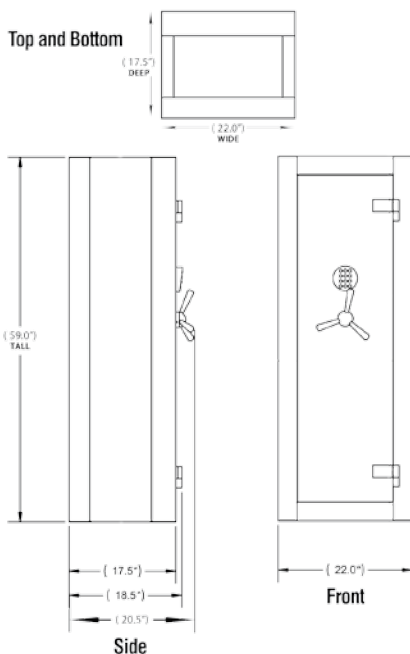

## SNAPSAFE TITAN SPECIFICATIONS:

**MODEL :** Titan

**EXTERIOR :** 59"H x 22"W x 17 1/2"D  
(Add 3" for handle)

**INTERIOR :** 55 1/8"H x 17"W x 14 1/2"D


**DOOR OPENING :** 52"H x 14 3/4"W

**LOCKING BOLTS :** 8

**CAPACITY :** 12 + Long Guns

**WEIGHT :** 388 Lbs. - 9 Gauge



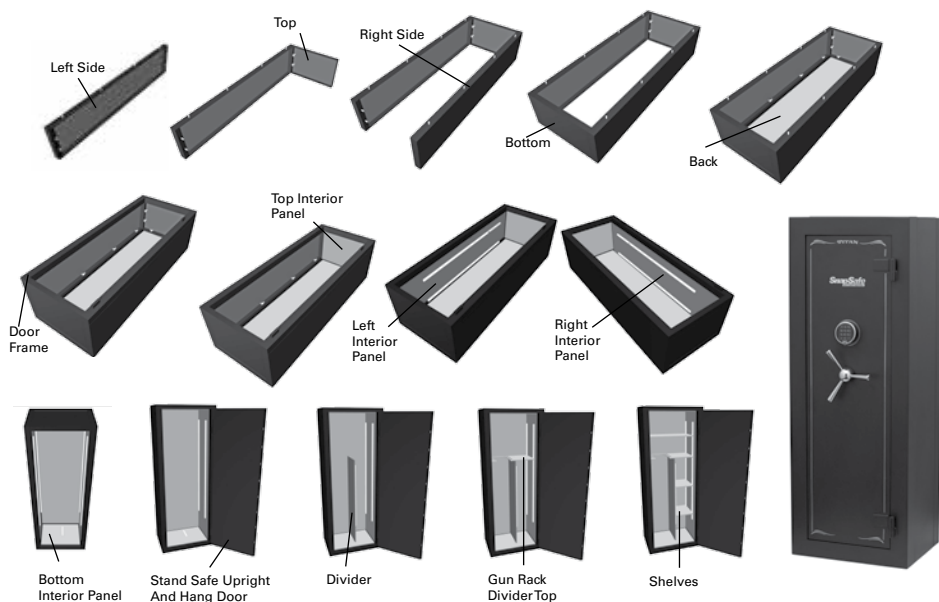

## ASSEMBLING YOUR SNAPSAFE TITAN

1. Unpack and lay out all parts.
2. Thread DOOR HANDLE SPOKES (Part #11) onto the hub on DOOR (Part #12).
3. Install a fresh high-quality 9V battery in the Entry Keypad (see pages 8 and 9).
4. Important – Remove temporary door hinge bolts from door hinges.
5. Enter the factory combination code and open the DOOR, then lift it off the DOOR FRAME (Part #6) and set aside.
6. Assemble Top, Bottom and Sides (Parts #1 through #4) first. Then bolt the entire assembly onto the BACK (Part #5).
7. For additional help watch our “Live Action Assembly Video” on the “Features” page at [www.snapsafe.com](http://www.snapsafe.com).


### Notes:



1. Each part is marked with an assembly number, orientation and instructions.
2. Each part’s orientation: TOP, BOTTOM, FRONT, etc. matches its orientation in the assembled vault. LEFT and RIGHT are as you face the front of the vault.
3. For easier assembly, remove the FIRESHIELD blankets from the TOP, BOTTOM and SIDEWALLS and then stuff them back into place before interior assembly.
4. Screw on nuts loosely at first. Once all Exterior Panels are aligned and seated tighten the nuts.
5. The INTERIOR SIDE PANELS are designed to fit snugly. Insert them through the door opening **bottom-to-top** and then slide into final position **front-to-back**.
6. Insert the INTERIOR BOTTOM PANEL through the door opening **between the front and back shelf strips** and then drop into position **front-to-back**.



## TITAN PARTS LIST

- Part #1 – LEFT SIDE
- Part #2 – TOP
- Part #3 – RIGHT SIDE
- Part #4 – BOTTOM
- Part #5 – BACK
- Part #6 – DOOR FRAME
- Part #7 – TOP INTERIOR PANEL
- Part #8 – LEFT INTERIOR PANEL
- Part #9 – RIGHT INTERIOR PANEL
- Part #10 – BOTTOM INTERIOR PANEL
- Part #11 – DOOR HANDLE SPOKES
- Part #12 – DOOR
- Part #13 – DIVIDER (optional)
- Part #14 – GUN RACK DIVIDER TOP (optional)
- Part #15 – SHELF HARDWARE (not pictured)
- Part #16 – LOWER SHELF (optional)
- Part #17 – LOWER SHELF (optional)
- Part #18 – UPPER SHELF
- Part #19 – HARDWARE (not pictured)
- Part #20 – FULL GUN RACK (not pictured)

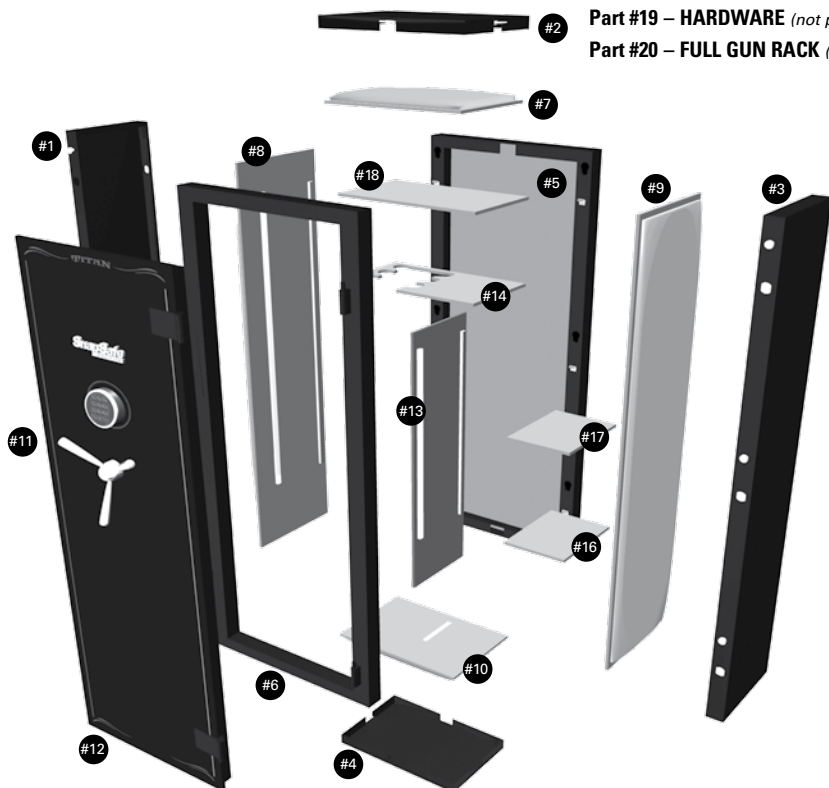

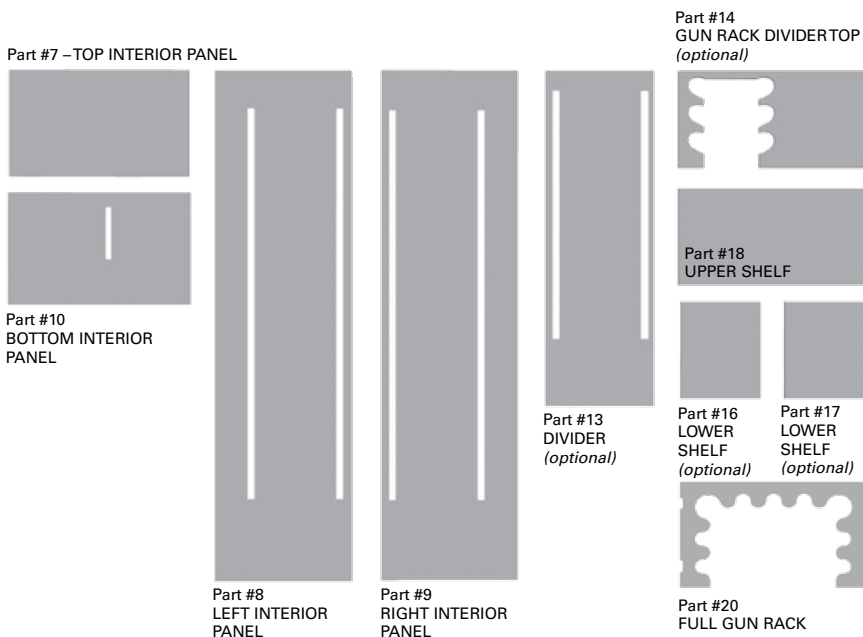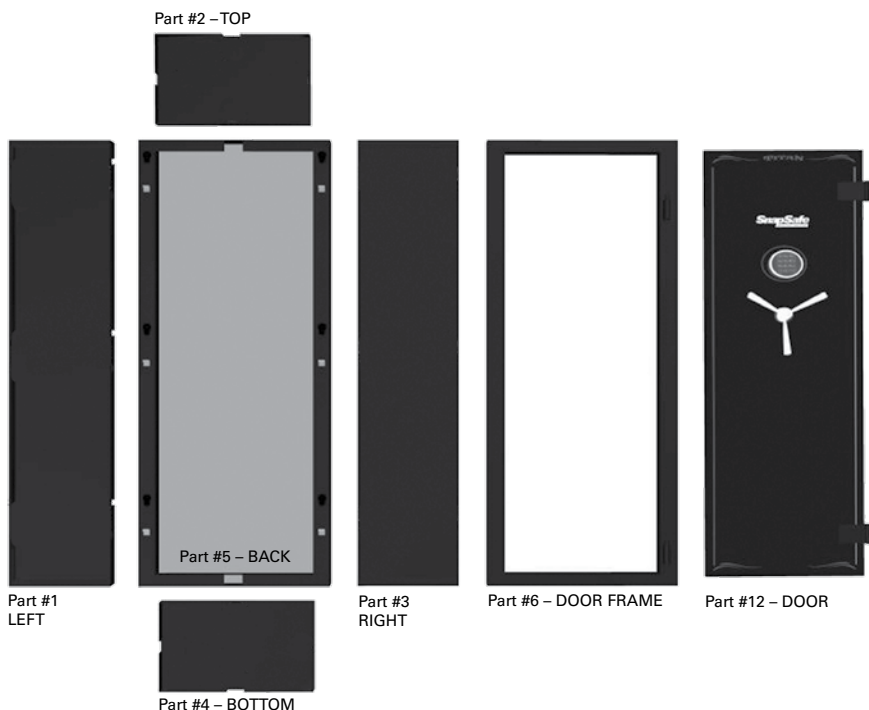

## YOUR COMBINATION CODE

---

- Your factory preset combination code is 1-2-3-4-5-6.
- It is recorded in a small envelope wired to the door handle of your vault.

***Store this combination in a location other than your vault.***

## OPENING AND CLOSING YOUR VAULT

---

### OPENING:

1. Enter the 6-digit combination code.
2. Rotate 3-spoke handle clockwise into the open position and pull door open.
3. The Entry Keypad relocks in 4 seconds after a valid code has been entered.
4. The Entry Keypad will return to "standby" status with a long beep sound if there is no operation in 10 seconds after the system has been activated.
5. If you enter an incorrect combination 4-times in a row, the lock will shut down for 5-minutes.

### CLOSING:

1. Close vault door.
2. Rotate 3-spoke handle counter-clockwise to the closed position until you hear bolts engage.

## CHANGING YOUR COMBINATION CODE

---

Write down and store a new 6-digit code. (**Do not store in vault.**) You cannot set the combination code to six (6) zeros (0).

1. Open vault door and lock it in open position.
2. Enter zero (0) six (6) times. One beep sounds indicating the entry is valid and the system is awaiting a code change.
3. Enter the **existing** 6-digit code. One beep sounds, indicating the entry is valid.
4. Enter a **new** 6-digit code. One beep sounds, indicating the entry is valid.
5. **Re-enter** the **new** 6-digit code. One beep sounds, indicating that the code in step 4 and 5 are the same and that the code change is successful.
6. If three beeps sound, the code change was unsuccessful, and the existing code is still valid. Repeat steps 2 – 5.
7. Enter and check new code 3-times before closing door.

**Note:** Each step in the code change process must be completed in 10 seconds or the system reverts back to "standby" status.

## DOUBLE SAFEGUARDING VALUABLE PAPERS

Your SnapSafe Titan's Fire Shield blankets are rated at 2300°F for one hour. However, we recommend that if you are going to be putting important papers in the vault, you first put it in a fire resistant document box, and then put it in the vault.



## BOLTING DOWN YOUR VAULT

We recommend bolting your vault to the floor using two ¼" wedge anchor concrete bolts through the predrilled holes in the **BOTTOM** of the vault.



## LOW BATTERY ALERT

Your lock has a "Low Battery Alert." If the Entry Keypad beeps repeatedly during an unlocking, the battery is low and needs immediate replacement.

## INSTALLING AND REPLACING ENTRY KEYPAD BATTERY

Your vault is equipped with an electronic lock made with non-volatile memory, meaning your combination code is retained even if the batteries are no longer powering the lock. If this happens, simply replace the batteries.

Install only a high-quality alkaline battery in the compartment in the back of the Entry Keypad following these steps.

1. Remove Entry Keypad. Slide it up and carefully pull it away from the vault door. (Fig.1)

**Note:** Do not pull the Keypad as too much force may damage the cable.

2. Snap new battery into the connector clip, and slide it into the battery compartment top down so that the wires will not be pinched between the battery and the vault door. (Fig.2)

3. Fold the connection cable inside the Keypad (Fig.3)

4. Position the Keypad over the mounting screws, and slide it down into position.

**Note:** Make sure the connection cable is not trapped between the Keypad and the door or rubs or tangles on the mounting screws. (Fig.4)



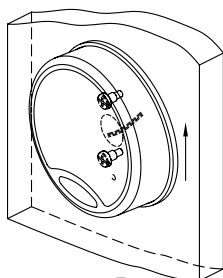
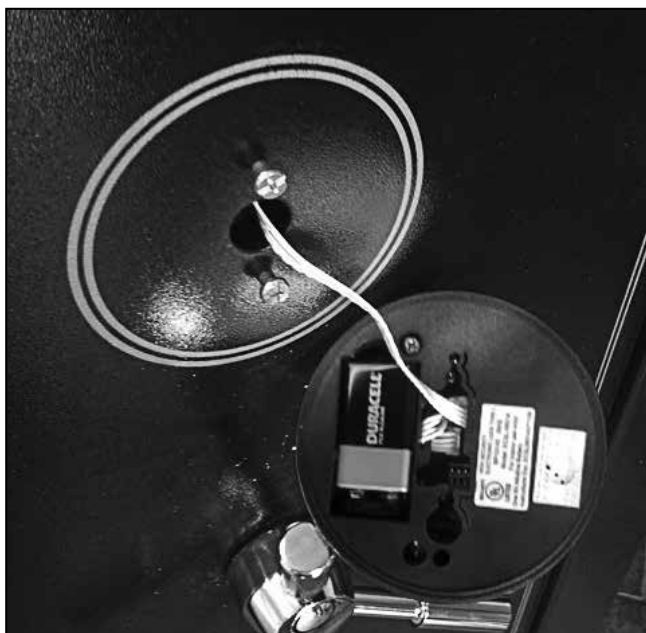


Fig. 1

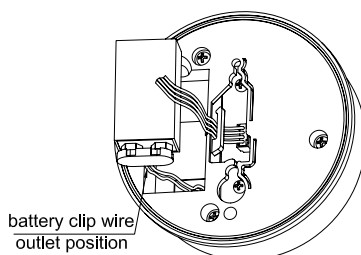


Fig. 2

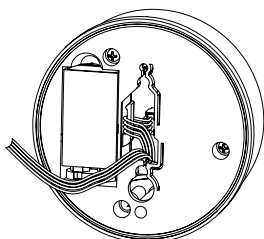


Fig. 3

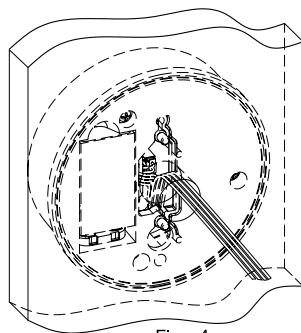


Fig. 4

## CARE AND MAINTENANCE

---

With a little care and maintenance your SnapSafe Modular Vault will last a lifetime. Keep the door hinge pins lightly greased so that the door opens smoothly. Vacuum the inside from time to time, and wipe down the outside with a soft cloth and mild detergent. Never use harsh solvents or abrasives on any surfaces, as they may damage the exterior finish or interior materials.

## SNAPSAFE LIFETIME WARRANTY

---

Were going to take care of you.

Period.

We have built products and a company we are proud of and want you to be as well.

If you ever experience a fire or attempted break-in we'll repair or replace your vault at no charge. *(All you have to do is to forward the report from the proper investigative agency.)*

[illegible]

## **IMPORTANT!**

### **Keep for Your Records.**

**Do not store this booklet and information in your vault.**

Date of receipt of vault \_\_\_\_\_

Vault serial number \_\_\_\_\_

(Located on plate on the bottom of door frame)

# ***SnapSafe®***

**Customer Service: 3721 Doubleton Drive Stuart, FL 34997**

**1-877-214-4470 | Email: [info@snapsafe.com](mailto:info@snapsafe.com)**