

# WOOX

DESIGNED TO PERFORM. BY NATURE.

## CLEANING KIT



MANUAL & INSTALLATION GUIDE

# INDEX

INDEX	p. 2
WOOX HERITAGE	p. 3
CLEANING KIT PRODUCT OVERVIEW	p. 4
KEY FEATURES	p. 5
SPECIFICATIONS	p. 5
ASSEMBLY	p. 6
CLEANING AND CARE: FURIOSA	p. 7
CLEANING AND CARE: EXACTUS	p. 8
CLEANING AND CARE: WILD MAN	p. 9
CLEANING AND CARE: AX1	p. 10
CLEANING AND CARE: ROCK62	p. 11
WARRANTY	p. 12
CONTACT	p. 14

# WOOX HERITAGE

When it comes to outdoor products and explorer accessories, some are made in a factory by scientists, and others are born on the workshop of an artisan with sawdust under his fingernails.

We are the creation when that artisan builds a lab. Drawing from over 100 years of Italian tradition and cutting-edge global technology, we are driven by a passionate group of enthusiasts who have made it their mission to bring the outdoor industry forward. This is the heritage of WOOX!

We are dedicated to providing advanced products and personal assistance that will transform your adventures – heirlooms to pass down to generations and stories to tell your grandchildren.

This is what we do.

Your Fellow Outdoorsman

A handwritten signature in black ink that reads "Kendall Reep". The script is fluid and cursive, with the first letters of each word being capitalized and prominent.

*Kendall Reep*

# CLEANING KIT PRODUCT OVERVIEW

Our birch wood, cherry-stained care and cleaning kit forever solves the problem of protecting your high-performance chassis and gunstocks. Designed by life-long gunstock makers, this functional - yet beautiful piece will be a welcome addition to any room or décor.

The kit includes:

- Professional Torque Wrench and Torque Wrench Bit Set
- Chassis and gunstock spray degreaser
- Fine Hand Brush
- Detailing Brush
- Bamboo Cloth for dialing cleaning

The WOOX care and cleaning kit is handsome and solidly built and well-crafted as a fine piece of luxurious furniture.

## KEY FEATURES

- Cherry-stained birch wood carrying case.
- Italian leather carry handle.
- Foam cut out (to keep your tools in place during travel).
- Sturdy adjustable rifle stand.
- Bamboo micro-fiber cleaning cloth.
- Large cleaning brush.
- Small cleaning brush.
- All-metal torque wrench (adjustable from 2 to 10 Nm).
- WOOX plant-based degreaser.

## SPECIFICATIONS

To view the detailed product specifications visit

<https://wooxstore.com/collections/chassis-stocks-accessories/products/stock-care-and-cleaning-kit>

# ASSEMBLY

The WOOX cleaning kit is intended to help the user clean and maintain the firearm.

The WOOX cleaning Kit comes with a sturdy rifle stand to hold your firearm in place during cleaning and maintenance

**STEP 1.** To set up the cleaning stand, thread both stand arms into the proper eye holes in the case to your desired height.

**STEP 2.** Once you have the stand arms to the desired height, screw the butterfly nuts down to secure them to the base. A metal torque wrench with 3 Torx bits are provided for any assembly or disassembly.

**STEP 3.** Our WOOX brand degreaser is great for cleaning any stuck-on grease or carbon buildup. Two cleaning brushes have also been provided for any difficult or hard to reach cleaning areas. The fine wood box and carrying handle offer the user the ability to have a stable platform to adjust or clean their rifle at the range or in the workshop. Enjoy your WOOX cleaning kit and all it offers.

# CLEANING AND CARE: FURIOSA

1. Remove the rifle from the stock.
2. Dampen a cleaning cloth with WOOX cleaning kit degreaser. Clean front to back. Use the WOOX provided vinyl brush to clean any troublesome areas.
3. To clean the front stock and M-LOK® rails, first remove the T25 Torx bit.
4. Remove all nine (9) M-LOK® screws. Clean any dirt, dust, or debris.
5. Reassemble in reverse order of disassembly.
6. Detach rear stock from monobloc housing and clean them both.
7. Remove cheek rest and butt pad and clean with a brush and rag.
8. Remove wooden grips from rear stock skeleton. Clean grips and stock with a brush and rag. Reassemble in reverse order of disassembly.
9. Reattach the cheek rest and butt pad to the rear stock, then reattach the rear stock to the monobloc body. Wipe away remaining degreaser.
10. Reassemble the rifle to the stock.
11. Wipe down the rifle and stock with a light coat of the rifle manufacturer's recommended gun oil.

**NOTE:** Use only a vinyl brush to clean any dirt, dust, or debris from the rear stock butt pad or cheek rest housing holes. DO NOT insert metal objects into the rear stock butt pad or cheek rest housing holes.

# CLEANING AND CARE: EXACTUS

1. Remove the rifle from the stock.
2. Dampen a cleaning cloth with WOOX cleaning kit degreaser. Clean front to back. Use the WOOX provided vinyl brush to clean any troublesome areas.
3. To clean the front stock and M-LOK® rails, first remove the T25 Torx bit.
4. Remove all three (3) M-LOK® screws. Clean any dirt, dust, or debris. Reassemble in reverse order of disassembly.
5. Clean monobloc housing.
6. Remove cheek rest from the rear stock by loosening the 4mm Allen screw. Clean with a brush and rag.
7. Reattach the cheek rest to the rear stock. Wipe away remaining degreaser.
8. Wipe down the rifle and stock with a light coat of the rifle manufacturer's recommended gun oil.



## CLEANING AND CARE: WILD MAN

1. Remove the rifle from the stock.
2. Dampen a cleaning cloth with WOOX cleaning kit degreaser. Clean front to back. Use the WOOX provided vinyl brush to clean any troublesome areas.
3. To clean the front stock assembly, first remove the T25 Torx bit. Also, remove both sling mount screws. Clean all necessary areas.
4. Reassemble in reverse order of disassembly.
5. Clean monobloc housing. Wipe away remaining degreaser.
6. Wipe down the reassembled rifle and stock with a light coat of the rifle manufacturer's recommended gun oil.

## CLEANING AND CARE: AX1

1. Dampen a cleaning cloth with WOOX cleaning kit degreaser and wipe down the knob and head handle of the axe.
2. Wipe down with a clean, dry rag.

## CLEANING AND CARE: ROCK62

1. Dampen a cleaning cloth with WOOX cleaning kit degreaser. Wipe down the knife removing any dust, dirt or debris from the blade and handle.
2. Inspect for any damage or wear and tear. If anything is damaged see WOOX FAQ on WOOX website or contact WOOX customer service.
3. Remove both screws holding the handles to the knife. Dampen a rag with WOOX cleaning kit degreaser. Clean the handles and the body of the knife removing any dust, dirt or debris.
4. Reattach handles in reverse of disassembly.
5. Wipe the knife down with a clean dry rag.

# WARRANTY

We hope you are happy with your WOOX products. However, if you have experienced problems with your WOOX product, we encourage you to seek information in our FAQ section. You are also welcome to contact our Customer Support if you need assistance to troubleshoot any problems you are experiencing.

**IMPORTANT: BY USING YOUR WOOX PRODUCTS BRANDED ITEMS, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF OUR TWO-YEAR LIMITED WARRANTY (“WARRANTY”) AS SET OUT BELOW.**

## Limited Hardware Warranty

Subject to the limitations set forth below, WOOX, LLC. (“WOOX”) warrants that its products will be free from defects in materials and workmanship, under normal use and service for two years from the date of purchase from WOOX or its authorized resellers.

You may return any new hardware product purchased from WOOX that arrives in damaged condition, for a full refund within 30 days of purchase. WOOX reserves the right to test these damaged returns and impose a customer fee equal to 15 percent of the product sales price if the customer misrepresents the condition of the product. Any returned product that is damaged through customer Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer. This warranty does not apply to equipment that has been damaged or rendered defective,

- as a result of accident, misuse or abuse;
- by the use of parts not manufactured or sold by WOOX;
- by modification without prior written consent from WOOX;
- damage resulting from transit, neglect, power surge or failure, or operating environment;
- any event not due to normal wear and tear; or for -
- discontinued items;

# WARRANTY

- periodic inspections for maintenance;
- failure of the product arising from incorrect installation or use not consistent with the instructions and technical or safety standards prescribed in the product user manual; or
- failure of any item as a result of not following the proper care instructions provided in the product user manual.

This limited warranty only applies to the original purchaser of the WOOX product with original proof of purchase.

Warranty and return service may be obtained by contacting WOOX Support within the applicable warranty period for a Return Material Authorization (RMA) number. Once an RMA number is issued, the defective product must be shipped back to WOOX prepaid, insured and wrapped in the original or similar shipping package to ensure that it will not be damaged during shipment. When returning defective product to WOX for service, the RMA number must be marked on the outside of the shipping package. Any product received at WOOX not packaged properly may be refused as out of warranty. Physically damaged products due to improper packaging will not be processed for warranty.

Any product returned without an RMA number may be rejected and sent back to the Customer at WOOX' discretion. WOOX disclaims any obligation to pay for the shipping of any such returned product, it being understood that the Customer shall bear the cost of returning such products.

This limited warranty gives you specific legal rights and does not, in any way, affect the rights given to you by law.

**WOOXSTORE.COM**



@WOOXOUTDOOR

WOOX LLC

1245 26<sup>th</sup> Street SE, Hickory, NC 28602 - USA

Registered® and Trademarked™ in 2019. All rights reserved.