


AKFX

SKELETON STOCK

INSTRUCTIONS

MAKE SURE YOUR FIREARM IS UNLOADED AND POINTED IN A SAFE DIRECTION WHEN INSTALLING THIS STOCK

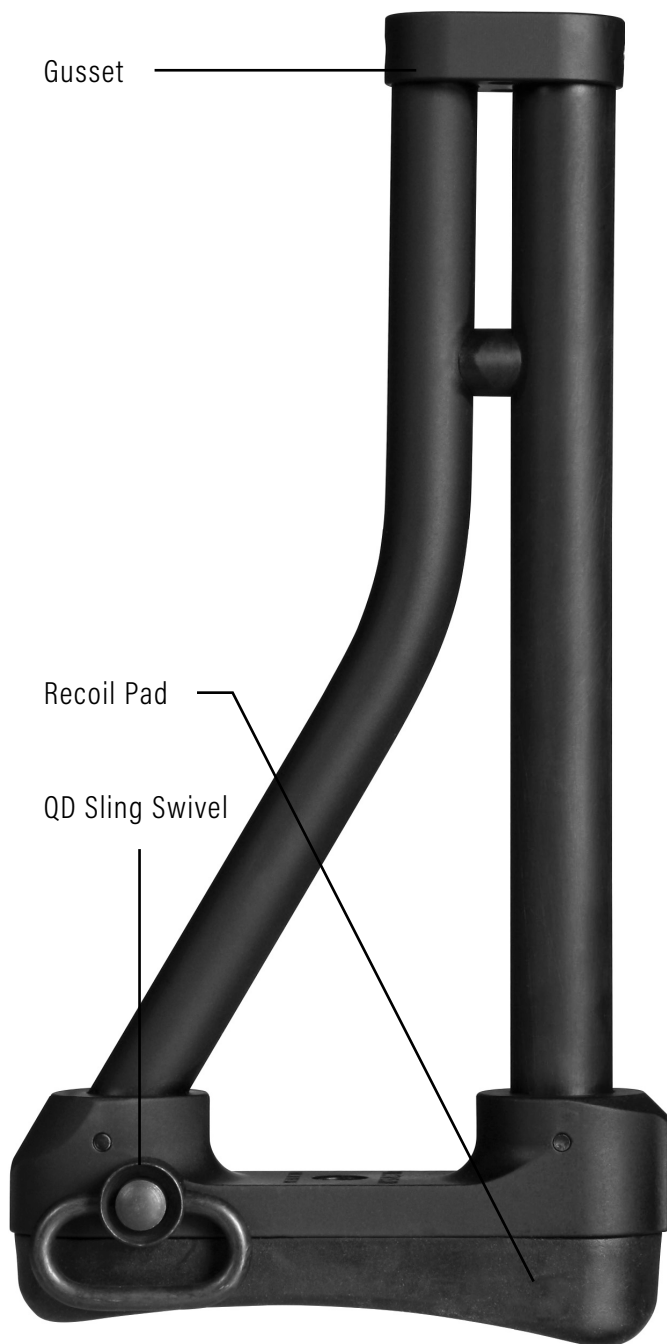

- 1** After the receiver block and/or folding mechanism are installed on weapon, place AKFX stock into place.
- 2** Slide a #10 split washer onto each of the 10-32 \times $\frac{3}{4}$ " socket head screw.
- 3** Thread a 10-32 \times $\frac{3}{4}$ " socket head screw through each of the holes in the gusset (front) of the stock. Tighten screws into receiver block or folding mechanism.
- 4** Place recoil pad into position (thickest end toward the top). Place provided 10-32 \times $\frac{3}{8}$ " button head screw through the top hole of the recoil pad and begin to tighten. DO NOT TIGHTEN ALL THE WAY. Place second 10-32 \times $\frac{3}{8}$ " button head screw through the bottom hole of the recoil pad and tighten into the buttplate. Finish tightening the top screw. DO NOT OVER TIGHTEN OR DAMAGE TO THE RECOIL PAD WILL OCCUR.
- 5** Install quick detach sling swivel into any of the quick detach mounting holes.