

**HAVE QUESTIONS OR
NEED ADDITIONAL SUPPORT?**


**support@mdttac.com
+1 (604) 393-0800**

INSTALLATION

1. Refer to the buttstock chart for proper screw placement. Line up the M-LOK nuts length-wise so that they fit into the M-LOK Slot on the buttstock.



2. Place the thin section of the bag rider under the buttpad. Depending on the number of LOP spacers installed, you may need to move the bag rider forward. So it does not go past the buttpad.

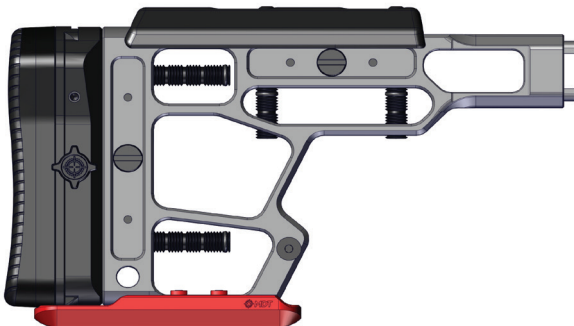

1. Once attached, start to tighten the screws using a 1/8" Allen Key or Torque wrench, making sure the M-LOK nuts rotate 90 degrees. **(Tighten to 25-30 inch-pounds).**



TOOLS REQUIRED

- 1/8" Allen Key or Torque Wrench

SUPPLIED HARDWARE

- (x2) #10-24 x 7/16" Button Head Cap Screws
- (x2) M-LOK Nuts


PRODUCT SPECIFIC NOTES

Recommended screw positions for the best fit on the buttstock

Buttstock	Back Screw	Front Screw
SRS-X Elite	2	4
SRS-X Lite	3	5
SRS-XF Premier	2	4
STS	3	5
Oryx	1	2

Back

Front

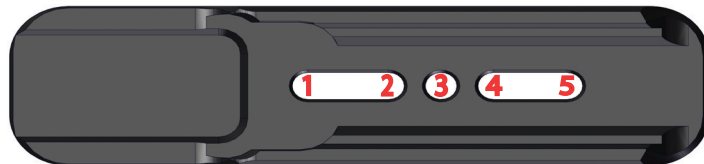

**WANT TO LEARN MORE?
CHECK OUT OUR INSTALL VIDEO**

