

# SNAPSAFE® TITAN ASSEMBLY

1. Unpack and lay out all parts.
2. Thread DOOR HANDLE SPOKES onto the hub on DOOR.
3. Install a fresh high-quality 9v battery in the Entry Keypad. (See attached instructions)
4. Remove temporary door hinge bolts from door hinges.
5. Enter the factory combination code and open the DOOR, lift it off the DOOR FRAME (Part #6) and set aside.
6. Lay BACK (Part #5) face down and assemble each part as labeled and pictured.
7. For additional help you can watch our "Live Action Assembly Video" on the "Features" page at [www.snapsafe.com](http://www.snapsafe.com)

## Notes:


1. Each part is marked with an assembly number, orientation and instructions.
2. Each part's orientation: TOP, BOTTOM, FRONT, etc. matches its orientation in the assembled vault. LEFT and RIGHT are as you face the front of the vault.
3. For easier assembly, remove the FIRESHIELD blankets from the TOP, BOTTOM and SIDEWALLS, and then stuff them back into place before interior assembly.
4. Screw on nuts loosely at first. Once all Exterior Panels are aligned and seated, tighten the nuts.
5. The INTERIOR SIDE PANELS are designed to fit snugly. Insert them through the door opening **bottom-to-top** and then slide into final position **front-to-back**.
6. Insert the INTERIOR BOTTOM PANEL through the door opening **between the front and back shelf strips** and then drop into position **front-to-back**.




# SnapSafe®

For all Customer Service questions call toll free: **1-877-214-4470**

Visit us at **[www.snapsafe.com](http://www.snapsafe.com)**

*SnapSafe® is a Hornady® Company.*

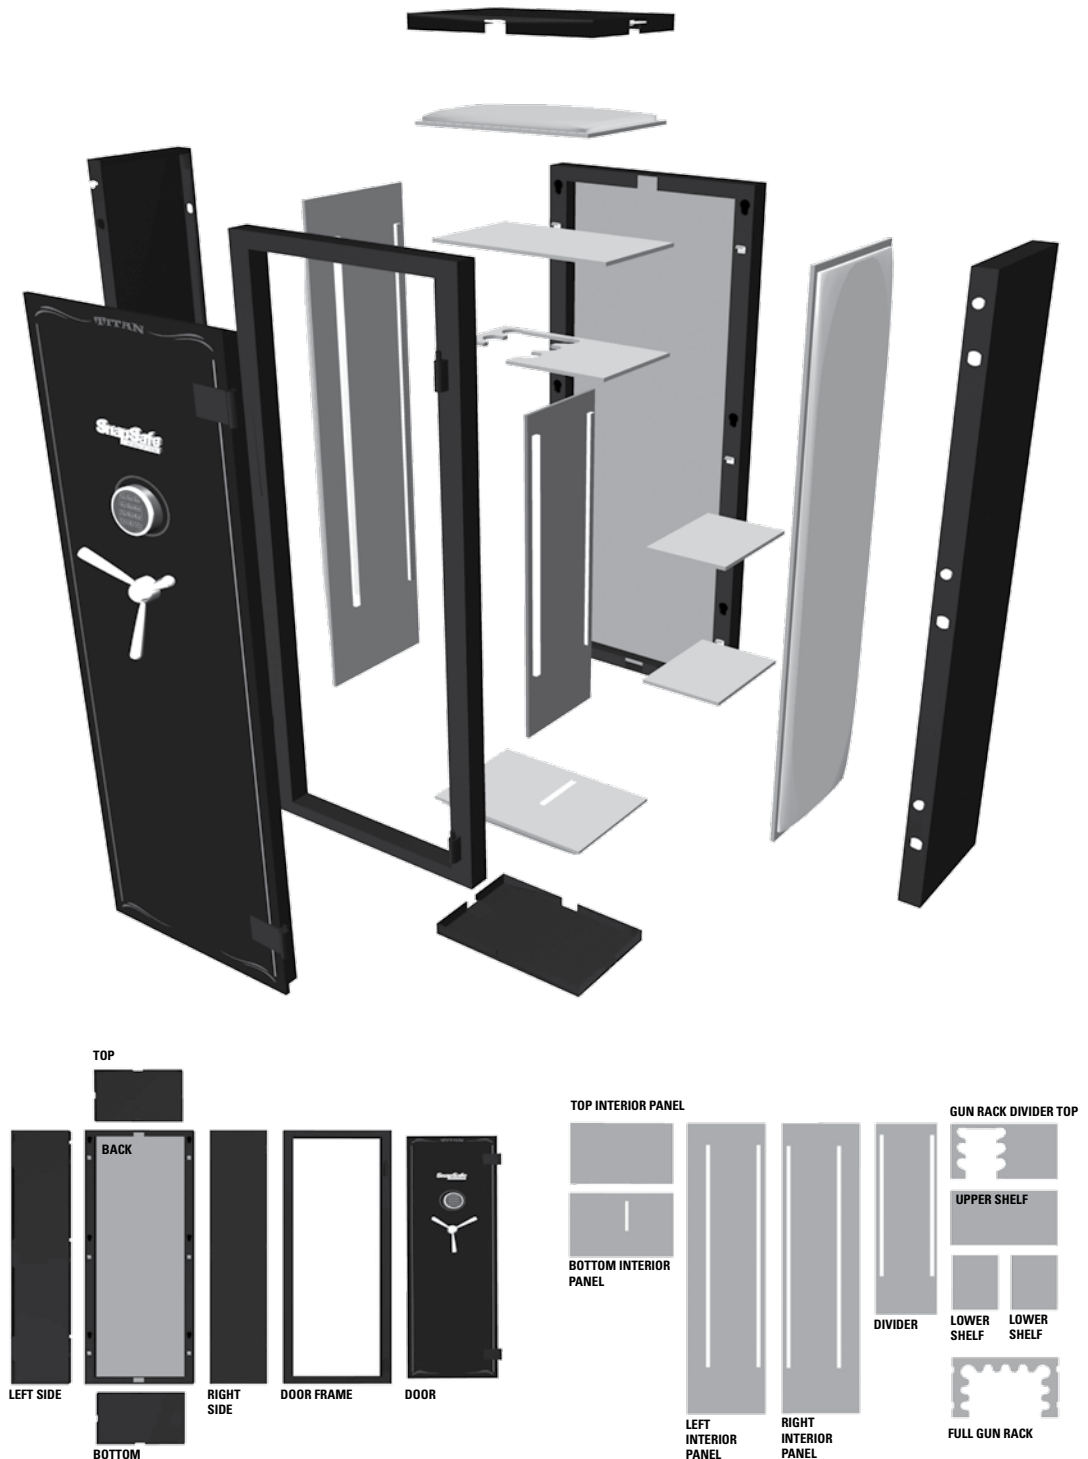

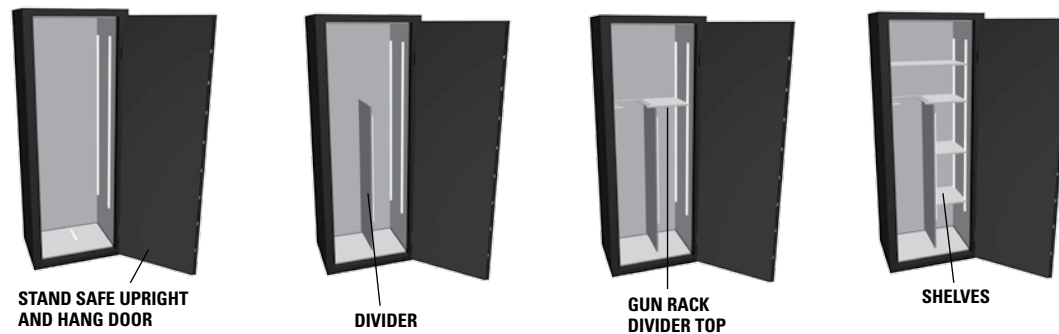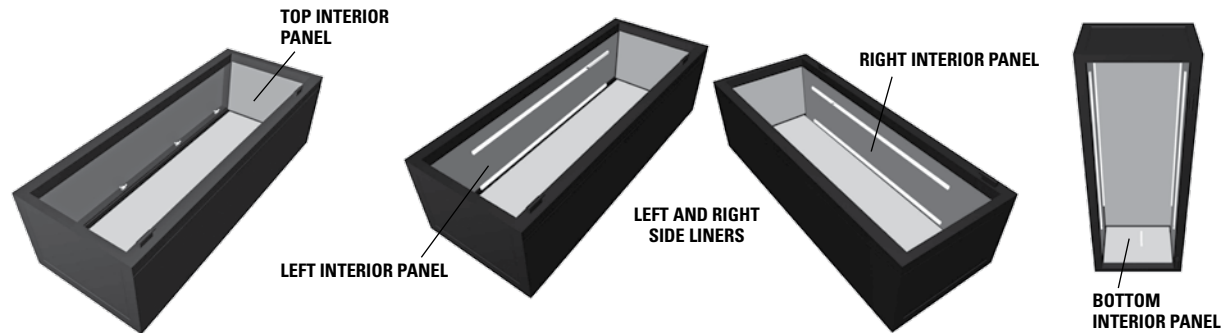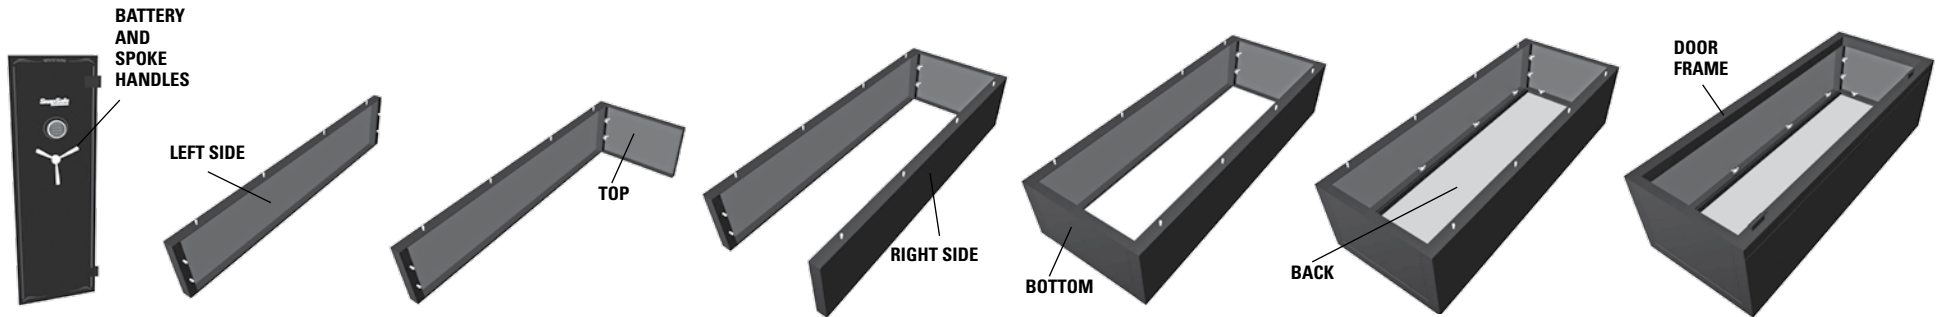

# SnapSafe®

For all Customer Service questions call toll free: **1-877-214-4470**

Visit us at **www.snapsafe.com**

*SnapSafe® is a Hornady® Company.*

# INSTALLING AND REPLACING ENTRY KEYPAD BATTERY

Install only a high-quality alkaline battery in the compartment in the back of the Entry Keypad following the steps below.

1. Remove Entry Keypad. Slide it up and carefully pull it away from the vault door. (Fig.1) **Note:** Do not pull on the Keypad with too much force as to damage the cable.
2. Snap new battery into the connector clip, and slide it into the battery compartment top down so that the wires will not be pinched between the battery and the vault door. (Fig.2)
3. Fold the connection cable inside the keypad. (Fig.3)
4. Position the keypad over the mounting screws, and slide it down into position. **Note:** Make sure the connection cable is not trapped between the keypad and the door, or rubs or tangles on the mounting screws. (Fig.4)

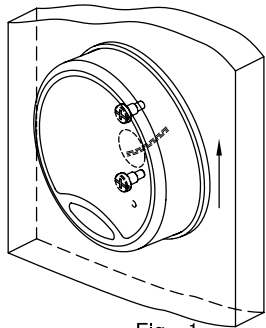


Fig. 1

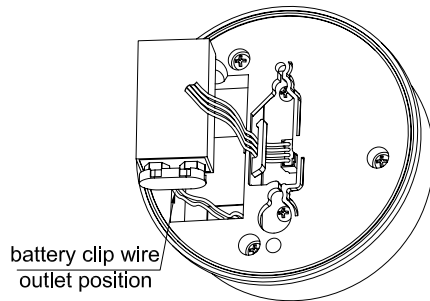


Fig. 2

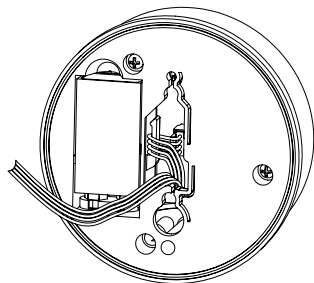


Fig. 3


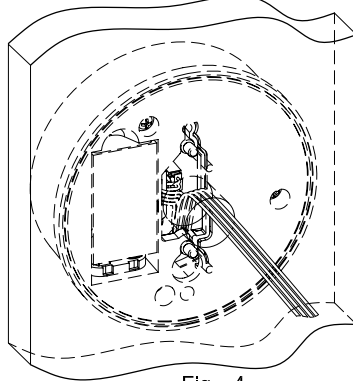


Fig. 4

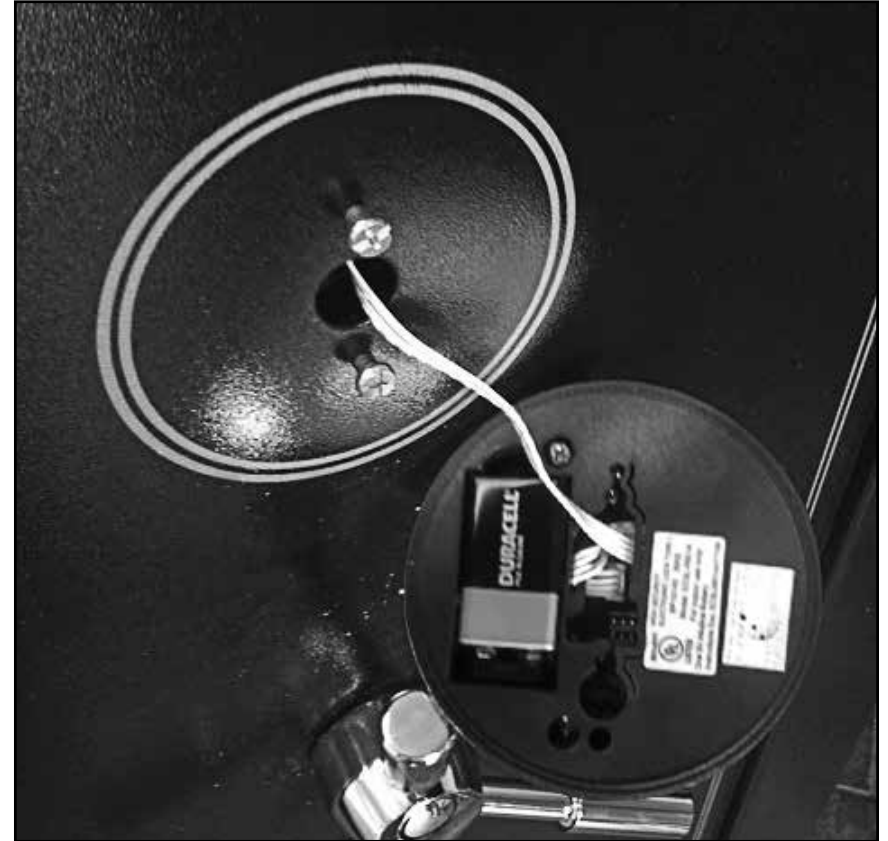

## SnapSafe®

For all Customer Service questions call toll free: **1-877-214-4470**

Visit us at **www.snapsafe.com**

SnapSafe® is a Hornady® Company.