



Place Rear Sling Loop Strap through molded-in loop on rear grip (Velcro® side down)

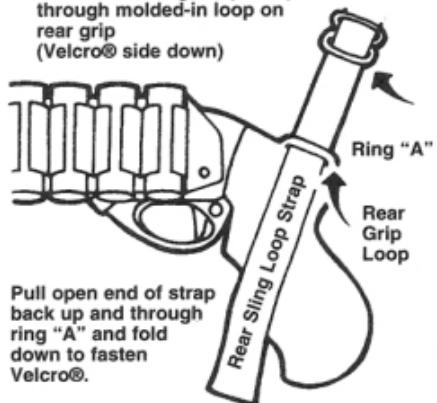

Pull open end of strap back up and through ring "A" and fold down to fasten Velcro®.

Attachment Buckle


Sling Webbing

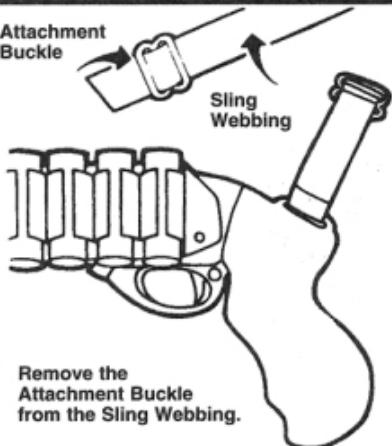

Remove the Attachment Buckle from the Sling Webbing.

Sling Webbing

Ring "B"

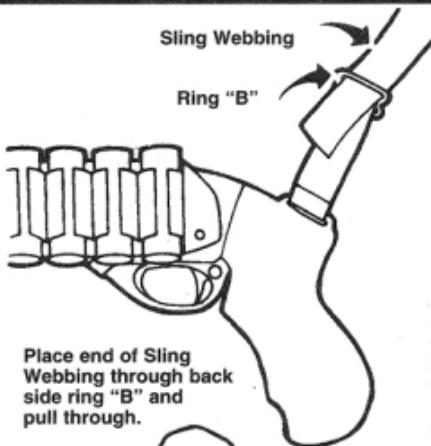


Place end of Sling Webbing through back side ring "B" and pull through.

Pass the same end through the Slip Loop on the other end of the Sling Webbing. Replace the Attachment Buckle.


Attachment Buckle

Slip Loop

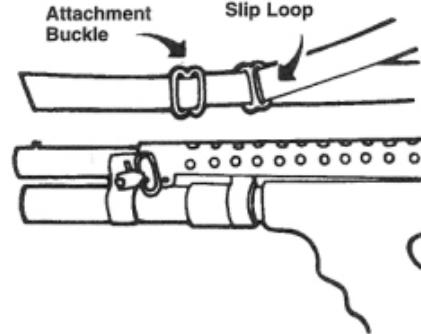



Then pass the end through the Forward Sling Loop. (Q D Swivel shown)

Forward Sling Loop

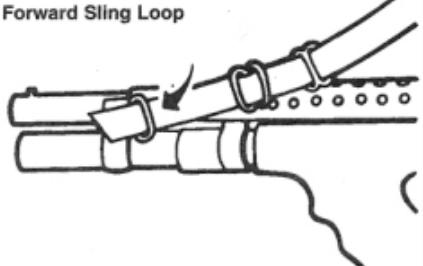

Adjust properly and pull open end through Attachment Buckle to securely fasten. When properly adjusted, the firearm should rest at waist level.

Attachment Buckle

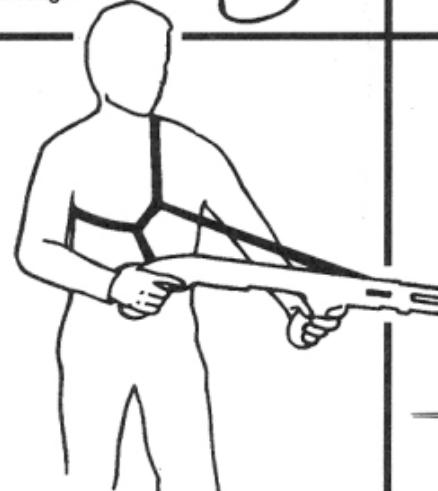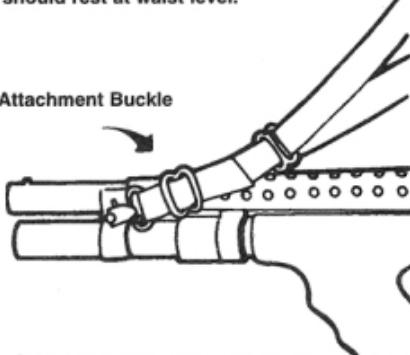

475 Smith Street
Middletown, CT 06457
800-423-9704

Made in the U.S.A

TAC STAR™