



LENS REMOVAL

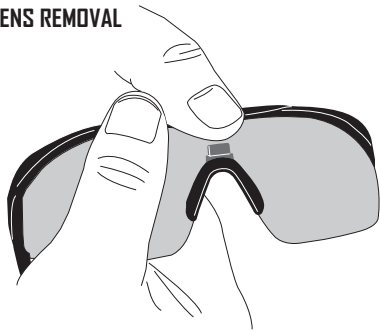


- 1) With one hand firmly grasp the frame directly above the nose piece.
- 2) With the opposite hand, grasp the lens.
- 3) Firmly pull on the lens to detach the lens from the center of the frame.

LENS INSTALLATION


- 1) Engage the lens hooks at the top outer edge of the lens into the frame.

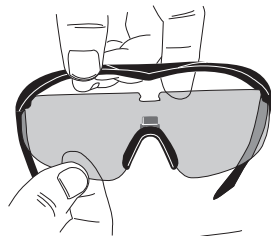

- 2) Align center lens slot into center catch of the frame. Squeeze the lens and frame together.

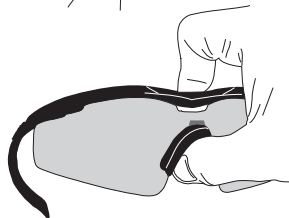


STRAP INSTALLATION / REMOVAL

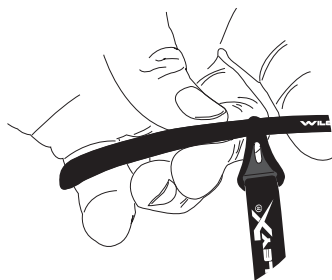

- 1) Fully insert the strap perpendicular to the temple as pictured above.
- 2) Secure the strap into the temple by rotating the inserted part parallel to the temple.
- 3) Reverse steps 1 and 2 for removal.

ADJUSTING TEMPLES

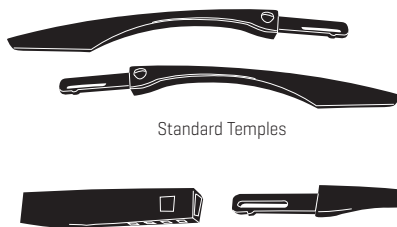

- 1) The temples have 4 locking positions.
- 2) Pull on the end of the temples to find the most comfortable length for you.

MAINTENANCE: Wiley X lenses are specially coated to offer superior abrasion resistance. Please follow below instructions to prolong the life of your lenses and keep them performing at their best:

- Clean lenses with water only.
- Do not use solvents or special cleaners.
- Use micro-fiber cleaning cloth provided to gently wipe clean.
- Never use paper products to clean and avoid wiping lens surface when dry and/or dirty as this may potentially scratch the lens.

WARNING: Wiley X brand eyewear is tested tough. However, impact resistant eyewear is not unbreakable and does not provide unlimited eye protection under all circumstances and conditions. Misused, abused, scratched and/or damaged eyewear can reduce impact protection (and void your limited warranty). Dirty and/or wet eyewear can impair vision and reduce safety (resulting in personal injury and/or property damage). Keep your Wiley X eyewear clean with water only. Do not use solvents or abrasives as it could scratch or damage the product reducing its effectiveness. Store your Wiley X eyewear in the protective case provided to prolong the life of the lenses. Most of all, take all appropriate precautions when wearing your Wiley X eyewear during hazardous and/or dangerous activities and conditions. Wiley X, Inc. is not responsible for personal injury, property damage or losses incurred while using Wiley X brand products.



WX TALON INSTRUCTIONS


WILEY X INC. 1.800.776.7842 // 925.243.9810 // WILEYX.COM
7800 PATTERSON PASS ROAD, LIVERMORE CA 94550 USA
WILEY X EUROPE LLC: +45 96 93 00 45 // WILEYX.EU
SØNDERGADE 8-10 7570 VEMB DENMARK ERX-ICTALON[1]

COPYRIGHT © 2014 WILEY X, INC. ALL RIGHTS RESERVED.

WILEY X, WX, BLACK OPS, logos, tag lines and product names are trademarks or registered trademarks (marcas registradas) of Wiley X, Inc. in the U.S. and other countries. Logos © 2007-2014 Wiley X, Inc. All rights reserved.

NOSE PIECE REMOVAL*

1) The nose piece and primary lens are interlocking.

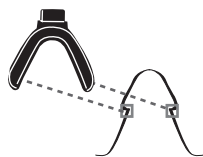


2) To detach, pull a leg of the nose piece once the leg is disengaged, the nose piece will simply rotate out.



*Should you require corrective lenses, install your UPLC Rx onto the nosepiece prior to installing the nose piece into your lens. See UPLC Rx Carrier instruction


NOSE PIECE INSTALLATION*

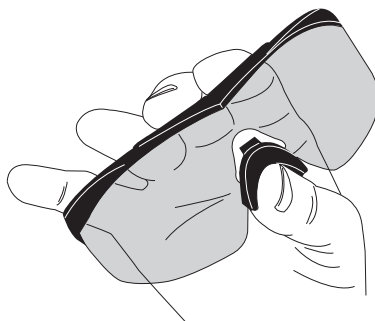


1) Align grooves of nose piece into the primary lens and squeeze together until the nose piece completely seats into the lens.

*Should you require corrective lenses, install your Rx onto the nosepiece prior to installing the nose piece into your lens. See Rx Carrier instruction

RX LENS CARRIER OPTIONS

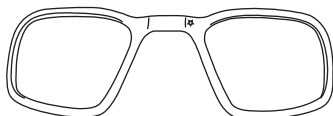


P/N: R9102:UPLC- Rx Carrier mounts on nose piece

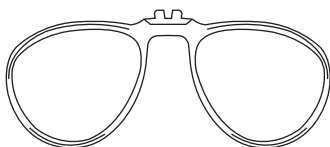


P/N: CHX- Rx Carrier mounts into frame

CHX RX CARRIER INSTRUCTION (P/N: CHX)

1) Press Rx Carrier into frame.

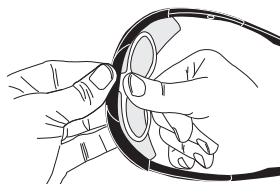


2) To remove Rx Carrier slide finger tip between Rx lens and protective lens. Grasp firmly as close to the frame as possible and pull out from frame.

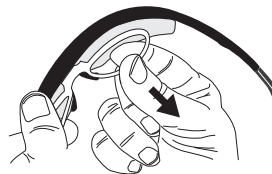

UPLC RX CARRIER INSTRUCTION (P/N: R9102)

INSTALLING THE CORRECTIVE LENS CARRIER

1) Remove the nose piece from the lens as directed in "nose piece removal."

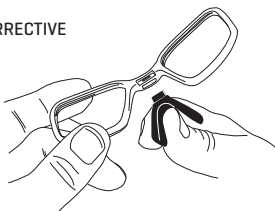


2) Fully insert the post at the top of the nosepiece into the slot of the Rx Carrier.

3) Install the nose piece into the lens.



REMOVING THE UPLC CORRECTIVE LENS CARRIER

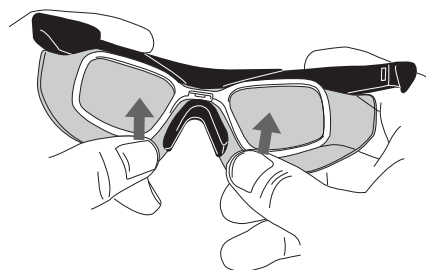

1) Place hands as pictured.

2) Push your thumbs against the lower edge of the Rx frame such that the center portion of the Rx Carrier lifts off the post on the nose piece.